


Multipurpose Electronic Whistle Operating Instructions

1. Main Function

- 3 volume selection, max 130dB
- 4 user-select whistle sound tones
- LED torch and flash
- SOS function

2. Operation

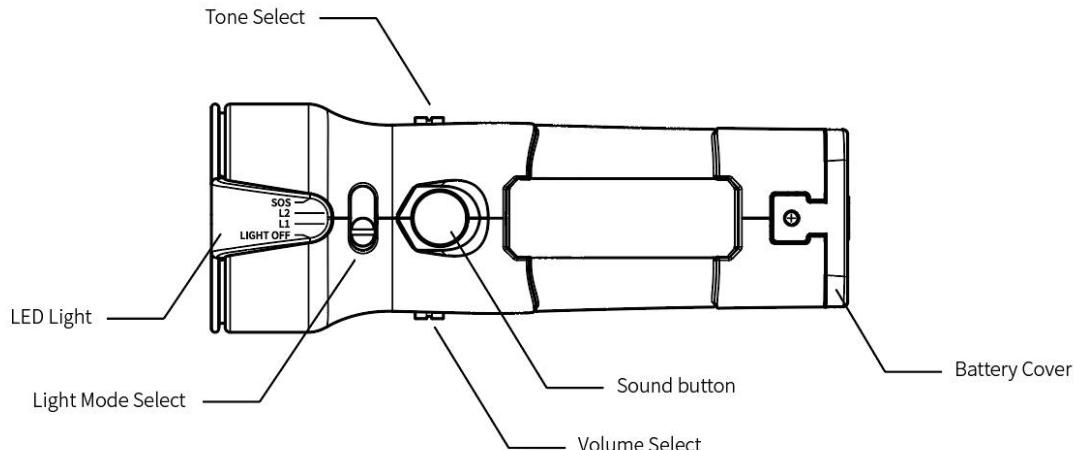

Sound Button:

Press to sound whistle, when the **Volume Select** is not on OFF.

Volume Select:

Slide the switch to control the whistle sound volume.

- OFF** sound disabled even when the Sound button is pressed. (this is overridden if the Light Mode Select is set to SOS, for which the LED will blink and buzzer sounds at highest volume, 3 long 1 short continuously indefinitely until the Light Mode Select is moved to other than SOS, or when the battery is drained up completely)
- V1** Sound volume low
- V2** Sound volume medium
- V3** Sound volume high

Tone Select:

Slide switch for tone selection T1, T2, T3 and T4.


Light Mode Select:

Slide switch for Light mode selection.



LED OFF

- L1** Light with Buzzer, LED blinks when buzzer sounds
- L2** LED ON continuously as a torch. Blinks when the **Sound Button** is pressed.
- SOS** SOS emergency flash and sound. There is a 2-seconds delay after switching to SOS, to avoid accidental switching. In the SOS mode the LED blinks and buzzer sounds at the highest volume. The LED blinks 3 long 3 short and then the buzzer sounds 3 long 3 short. The SOS mode will not stop until the Light Mode Select is moved to other than SOS, or until the battery is drained up completely)

3. Battery installation and replacement

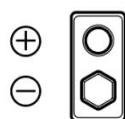

Positive and negative terminals of the battery

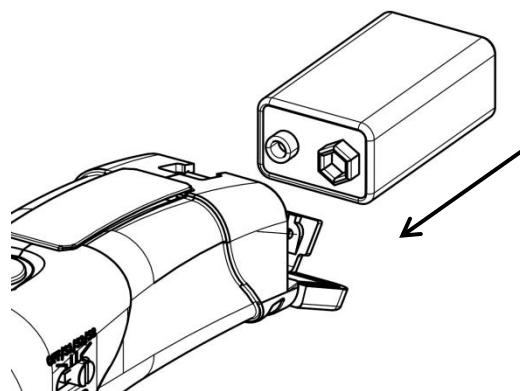
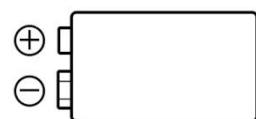


Remove the screw securing the Battery Cover to the case. Install the batteries according to the positive and negative terminals (+ , -) in the battery slot.

(Caution: Check or replace the battery regularly, and remove the battery if you expect not to use the whistle for a long time. When the battery power runs low, the sound may be weakened, broken, or unable to sound.)

4. Rechargeable battery installation and replacement

The regular battery cover can be replaced by the recharging battery cover included in the recharging battery pack.

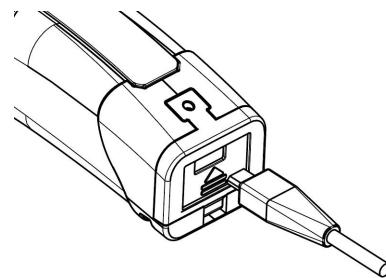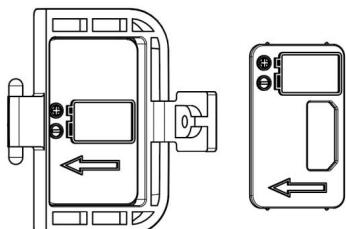

The recharging battery cover has a hole through which a USB power plug (not included) can be inserted into the USB socket on the rechargeable battery inside.

Physical dimension:

50*60*140 mm

Product uses:

Sports (refereeing or training), Emergency alert, Rally warning command in public place, Traffic command, Military training, Pet training, etc.

Tips: Gripping the whistle around the speaker helps increasing sound volume.

After sales:

Please contact your dealer for any quality problems or questions.

Caution:

This product is not a toy. Do not sound whistle near your ears, it may damage your hearing.
Do not allow children to play or use.